

POWERFLEX®

PART NUMBER
PFF50-303

DESCRIPTION
FRONT ANTI ROLL BAR BUSH

INSTALLATION GUIDE

The instructions apply to sizes with bore diameter: 17mm, 18mm, 19mm, 21mm and 22mm.

Contents (parts per pack):

2 x Polyurethane bushes 1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original anti roll bar bushes from the roll bar.
2. Clean any dirt and corrosion from the bracket.
3. Gently pry open the polyurethane bushes and mount over the roll bar, making sure the groove feature inside the bore of the polyurethane bush lines up with the groove on the roll bar (this restricts any horizontal movement), as shown in Figure 1.
4. Fit the brackets over the polyurethane bushes and tighten the bolts to clamp down on the bush.
5. Tension all hardware to manufacturers recommended torque settings.

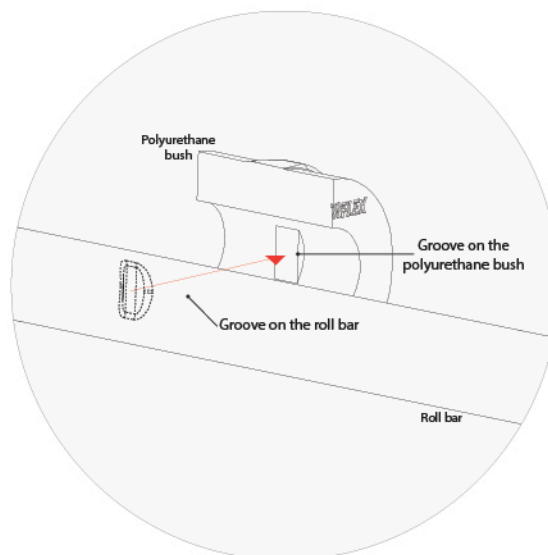


Figure 1 - shows the positioning of the polyurethane bush to the roll bar where the red arrow shows the correct line up of the two parts