

# POWERFLEX®

**PART NUMBER**  
**PFF85-1702**

**DESCRIPTION**  
**FRONT LOWER WISHBONE REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush from the wishbone.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Press in the polyurethane bush into the bore of the wishbone until the lip sits flush against the arm.
4. Apply some of the supplied grease into the bore of the polyurethane bush.
5. Press in the stainless steel sleeve into the polyurethane bush until it sits flush inside.
6. Re-fit the arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.



Figure 2

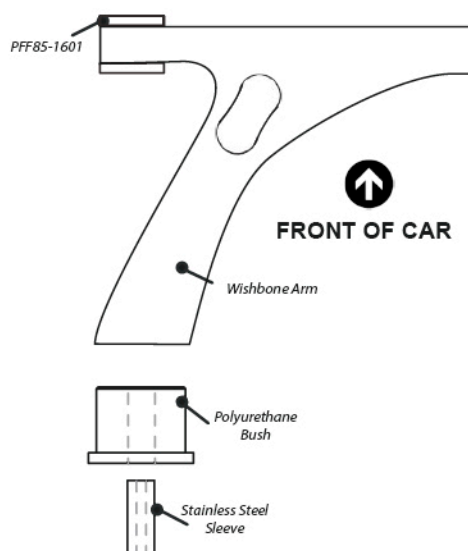


Figure 1 - how the polyurethane bush fits in the arm