

# POWERFLEX®


PART NUMBER  
**PFR69-507**

DESCRIPTION  
**REAR TRAILING ARM REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per car):

- 2 x bushes (4 polyurethane parts)
- 2 x metal sleeves
- 4 x nylon washers
- 1 x grease

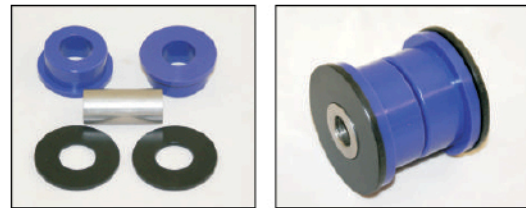

*Please read the complete fitting instructions and check package components before fitment.*

*This installation guide is to be used in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licenced technician;
  - all safety precautions adhered to;
  - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*

### Installation Guide:

- Remove rear trailing arm rear bush from the upright.
- Insert the 2 polyurethane top hat bushes into the upright, apply some of the supplied grease to the bore of the bush and outside of the stainless sleeve, slide the sleeve into the bush.
- Place two of the nylon washers, one each side of the bush, after applying some grease to the faces of the bush.
- Replace removed parts.

