

POWERFLEX

PART NUMBER
PFR3-741

DESCRIPTION
 REAR DIFF FRONT BUSH INSERT

INSTALLATION GUIDE

Contents (parts per pack):

- 1x Polyurethane bush
- 1 x Stainless steel sleeve
- 1 x Steel washer
- 1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- allwork to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Support rear subframe. Loosen bolts on subframe. Remove front mount bolts completely to lower subframe to gain access.
2. Clean any dirt and corrosion from voids in the original bush and clean any dirt/corrosion.
3. Fit polyurethane insert into top side void on the subframe bush.
4. Fit stainless steel sleeve into bottom side void on the subframe bush.
5. Place steel washer flush against polyurethane insert.
6. Re-fit subframe to the car. Tension all hardware to manufacturers recommended torque settings.

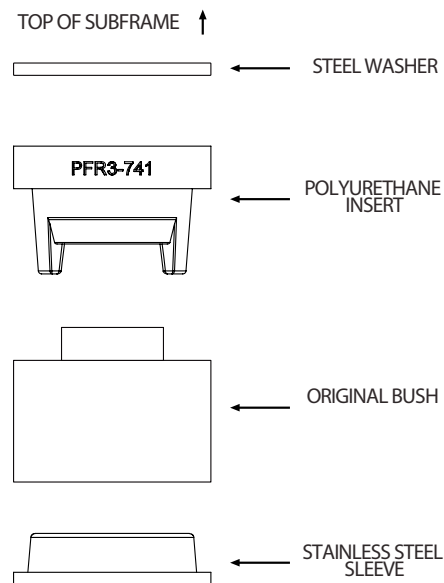


Figure 1: Assembly exploded view