

# POWERFLEX®

PART NUMBER  
**PFF5-201**

DESCRIPTION  
**FRONT LOWER ARM REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane A Bushes    1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Polyurethane C Bushes

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush from the bracket.
2. Clean any dirt and corrosion from the bracket, and file off any sharp edges.
3. Push the polyurethane part B onto the bracket, with the recessed section hidden against the arm.
4. Apply some of the supplied grease to the bracket, and push the polyurethane part A onto the bracket with the larger diameter first. The top hat section of the polyurethane part A should sit against polyurethane part B.
5. Push the polyurethane part C onto part A, larger diameter first. The two parts should sit flush with each other. **TIP: Apply some washing up liquid to part A and to the bore of part C to aid in fitting.**
6. Tension all hardware to manufacturers recommended torque settings.

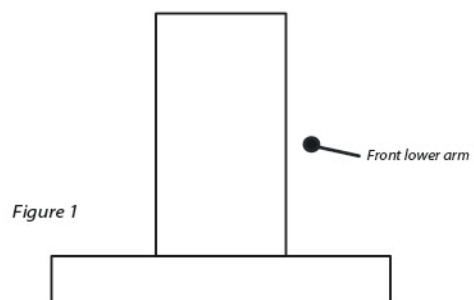

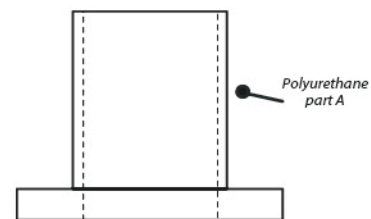
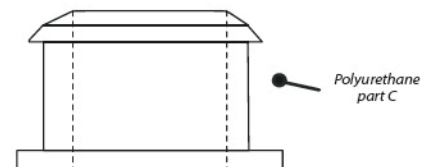


Figure 1