

# POWERFLEX®

PART NUMBER  
**PFF3-221**

DESCRIPTION  
ENGINE SNUB NOSE MOUNT

## INSTALLATION GUIDE

### Contents (parts per pack):

- 1 x Polyurethane Bush
- 1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the bracket from the engine mount and the original bush from the spigot.
2. Clean off any corrosion or dirt from the spigot.
3. Push the polyurethane bush onto the spigot, with the chamfered edge facing towards the front of the arm, as shown in Figure 1.
4. Refit the bracket back onto the engine mount and tension all hardware to manufacturers recommended torque settings.

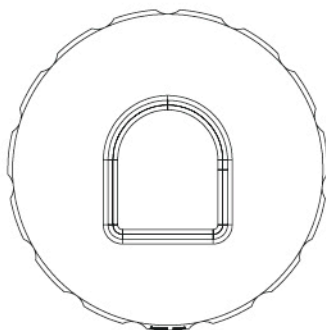


Figure 2 - front view of the polyurethane part

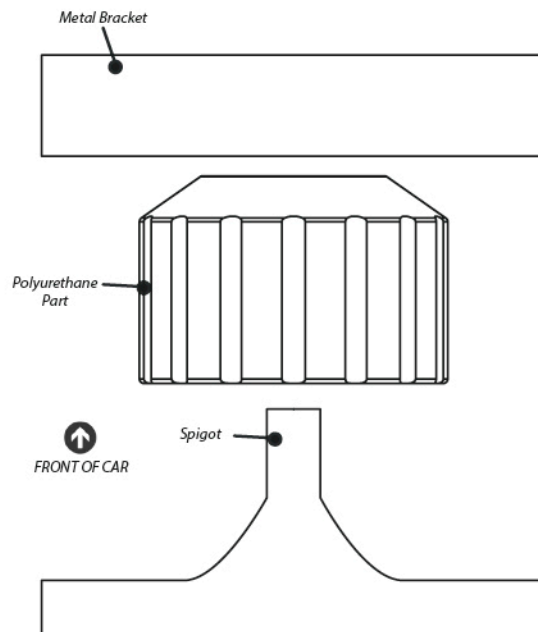


Figure 1 - diagram showing which way the polyurethane part goes into the bracket