

POWERFLEX®

PART NUMBER
PFR3-1118

DESCRIPTION
REAR TRACK ROD OUTER BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------|------------------------------------|
| 4 x PFR3-1118 Bushes | 1 x PTFE/Silicone Grease |
| 2 x Stainless Steel Sleeves | 2 x Zinc Plated Mild Steel Washers |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush from the arm and clean away any dirt and corrosion.
 2. File away any sharp edges using a rounded file.
 3. Insert the PFR3-1118 Bushes into each end of the vacant hole, ensuring they sit flush.
 4. Apply some of the supplied grease to the bore of the bushes, and insert the Stainless Steel Sleeve into the bore, until it sits flush.
- Note: Please refer to Figure 1 for orientation of the sleeve. The wide end must be facing the rear of the car.**
5. Place the Zinc Plated Mild Steel Washer on the opposite face to the face the Stainless Steel Sleeve is resting on, and refit the arm to the knuckle.
 6. When refitting the arm, ensure to tension all hardware to manufacturers recommended torque settings.

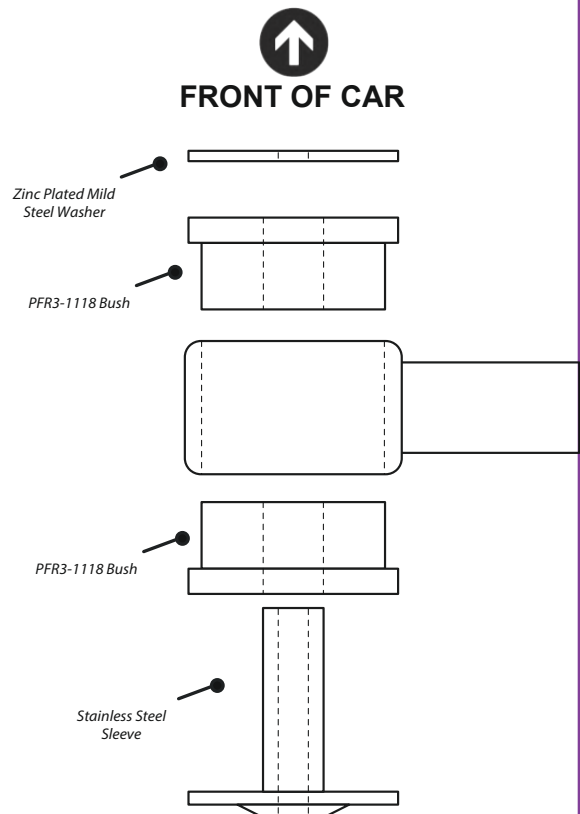


Figure 1