

# POWERFLEX®

PART NUMBER	DESCRIPTION
<b>PFF1-1001G</b>	<b>FRONT WISHBONE FRONT BUSH - CAMBER ADJUSTABLE</b>

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane GF Bushes 1 x PTFE/Silicone Grease
- 2 x Polyurethane GR Bushes 2 x Stainless Steel Sleeves
- 1 x Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush from the arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Insert the bushes into the arm with part GF, with the smaller lip, going in from the front of the car as shown in Figure 1.
4. Apply some of the supplied grease into the bore of the bush and around the top face.
5. Press the stainless steel sleeve into the bush so that it sits flush against the polyurethane part.
6. Re-fit the arm to the car and tension all hardware to manufacturers recommended torque settings.

**Note: To adjust camber, loosen front bush mounting bolt and rotate the sleeve using the supplied spanner to achieve desired camber angles. For maximum camber, position the bore of the sleeve towards the middle of the car (Figure 2).**

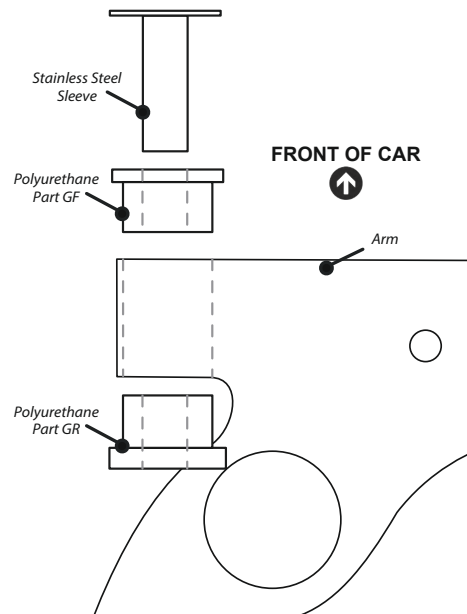


Figure 1

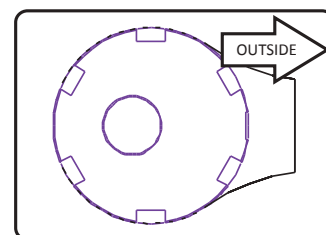


Figure 2 - for maximum camber adjustment