

POWERFLEX®

PART NUMBER
PFF50-215-17

DESCRIPTION
ANTI ROLL BAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane Bush 1 x Grease
1 x Part A Polyurethane Bush

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original anti roll bar bushes from the front roll bar.
2. Clean any dirt and corrosion from the bracket.
3. Gently pry open the part A polyurethane bush and mount over the roll bar, where the groove is placed. Make sure the groove feature inside the bore of the polyurethane bush lines up with the groove on the roll bar (this restricts any horizontal movement), as shown in Figure 1.
4. Repeat step 3 for the other polyurethane bush except this one does not have a groove and will just simply mount over the roll bar.
5. Fit the brackets over the polyurethane bushes and tighten the bolts to clamp down on the bush.
6. Tension all hardware to manufacturers recommended torque settings.

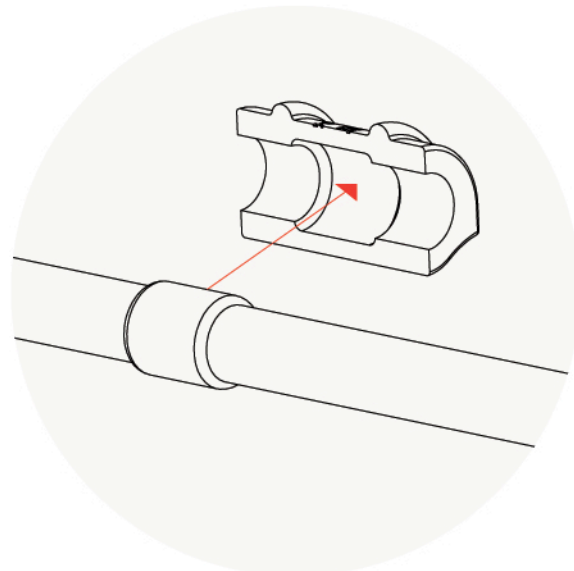


Figure 1 - shows the positioning of part A polyurethane bush to the roll bar where the red arrow shows the correct line up up of the two parts