

# POWERFLEX®

**PART NUMBER**  
**PFF85-802**

**DESCRIPTION**  
**FRONT WISHBONE REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane Bushes      1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves
- 2 x Zinc Plated Mild Steel Outer Shells

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original rubber bush from the front wishbone.
2. Clean any dirt and corrosion from the bore of the arm, and file off any sharp edges.
3. Push the outer shell into the bore, smaller diameter first, from the top of the arm.
4. Push the polyurethane part into the bore of the outer shell, smaller diameter first. **TIP: Apply some washing up liquid around the polyurethane part to aid in fitting.**
5. Apply some of the supplied grease to the bore of the polyurethane part and push the stainless steel sleeve into the bore so it sits flush inside the bush. For maximum caster adjustment, the offset holes in the sleeves must be closest to the middle of the car, as shown in figure 1.
6. Tension all hardware to manufacturers recommended torque settings.

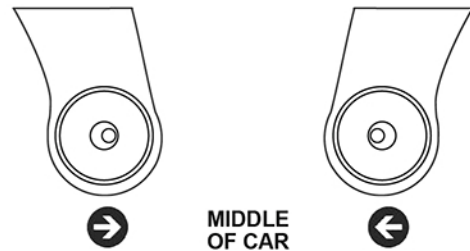


Figure 1

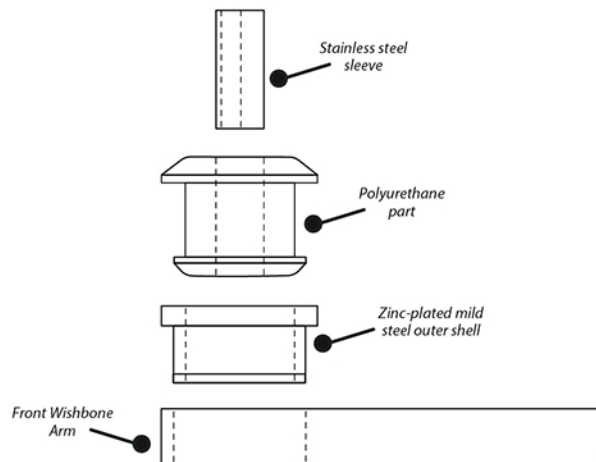


Figure 2