

POWERFLEX®

PART NUMBER
PFF85-502

DESCRIPTION
FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x Grease
 2 x Polyurethane B Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the wishbone bracket.
 2. Clean any dirt or corrosion from the end of the wishbone and remove any sharp edges using a file.
 3. Apply some washing up liquid to the outside of part B for ease of fitting (Figure 1).
 4. Press part B into the bracket, making sure to push it in with the chamfered lip going in first. Ensure the lip has fully popped out of the other side of the arm. Note Figure 2 for left hand and right hand positions.
- Tip: Insert part B into the arm at an angle to allow for ease of fitting.**
5. Apply some of the supplied grease to the bore of the bush and insert part A into the part B.
 6. Re-fit the bracket to the car and tension all hardware to the manufacturers recommended torque settings.

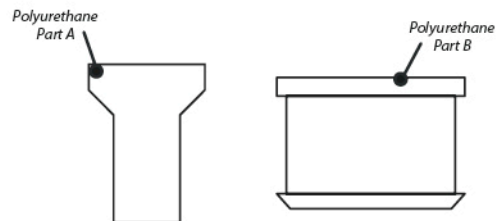


Figure 1



LEFT HAND OF CAR



RIGHT HAND OF CAR

Figure 2