

POWERFLEX®

PART NUMBER
PFF36-400

DESCRIPTION
FRONT LOWER ARM REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original rubber bush from the arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Press the polyurethane bush into the bore of the arm with the arrows on the bush facing upwards so the smaller end of the bush points upwards. Make sure the lip has popped out the other side of the arm (Figure 1).

Tip: apply washing up liquid to the outside of the polyurethane bush to ease fitting. Also insert the bush at an angle so that one part of the lip is already in the bore of the arm.

4. Apply some of the supplied grease into the bore of the polyurethane bush and push in the stainless steel into the bush so that it sits flush.

5. Refit the arm to the vehicle and tension all hardware to manufacturers recommended torque settings.

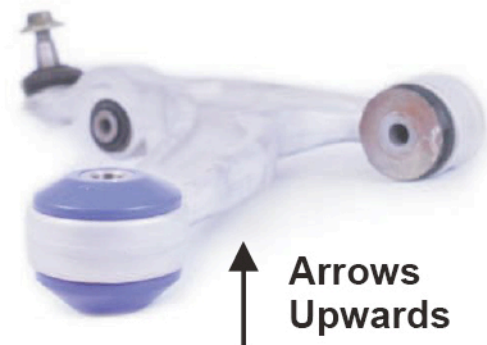


Figure 1