

POWERFLEX®

PART NUMBER
PFF36-403

DESCRIPTION
FRONT UPPER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
4 x Stainless Steel Sleeves
4 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bushes from the front upper wishbone.
2. Clean any dirt and corrosion from the bores of the wishbone, and file off any sharp edges.
3. Push the polyurethane bush into the bore towards the middle of the arm, so that the top hat section sits on the outer edge of the wishbone as shown in figure 1. The two bushes should face each other in the arm.
4. Apply some of the supplied grease to the bore of the polyurethane part and insert the stainless steel sleeve until it sits flush within the bush.
5. When refitting the wishbone, place a washer over the outer end of each bush and tension all hardware to manufacturers recommended torque settings.

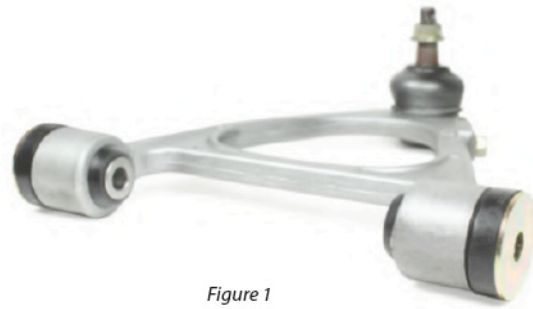


Figure 1