

# POWERFLEX®

PART NUMBER  
**PFF3-202**

DESCRIPTION  
**FRONT TIE BAR REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Stainless Steel Sleeves

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original rubber bush from the arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Press fit the bush with the metal outer shell inside the bore of the arm, with the bigger diameter of the metal outer shell sitting flush against the machined side of the arm (Figure 1).

**Tip: the arm sits central in the bush so direction of the bush is not critical.**

4. Apply some of the supplied grease into the bore of the polyurethane and press in the stainless steel sleeve.
5. Re-fit the arm back to the car and tension all hardware to manufacturers recommended torque settings.

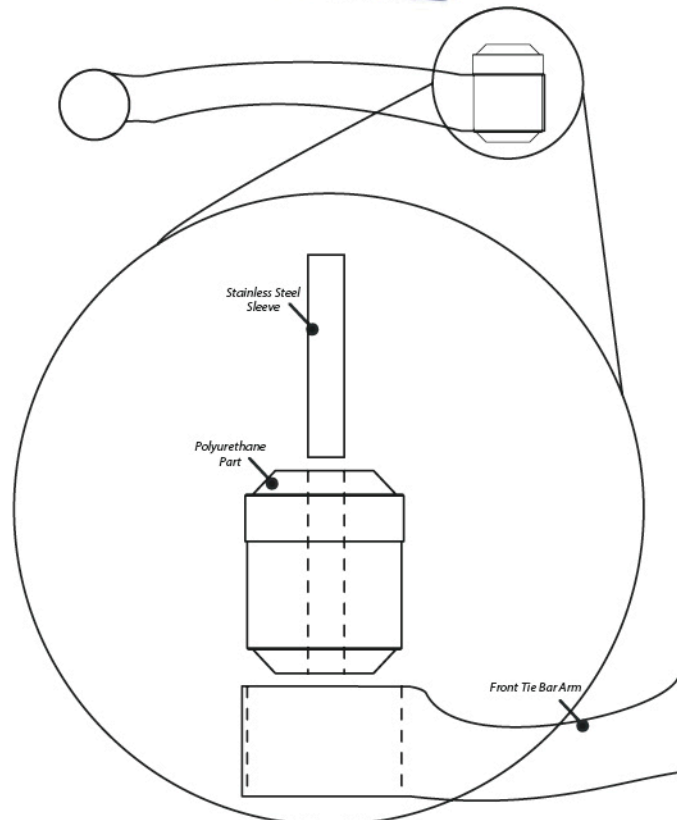


Figure 1 - exploded diagram showing how the polyurethane part will fit inside the arm