

# POWERFLEX®

PART NUMBER	DESCRIPTION
<b>PFF85-211</b>	<b>FRONT WISHBONE FRONT BUSH</b>

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane A Bushes    1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes    2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.  
 It is recommended that:  
 -all work to be carried out by a licensed technician;  
 -all safety precautions adhered to;  
 -wheel alignment to be checked and adjusted as required after any suspension work.  
 -All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original bushes from the arm.
2. Clean any dirt and corrosion from the bore of the arm and using a file, remove any sharp edges.
3. Insert part A, with the radius under the lip, from the front of the car. Insert part B, with no radius, from the rear of the car, as shown in Figure 2.
4. Apply the supplied grease into the bore of the polyurethane bushes.
5. Press the stainless steel sleeve into the bore of the polyurethane bush until it sits flush.
6. Re-fit the wishbone back onto the vehicle and tension all hardware to manufacturers recommended torque settings.

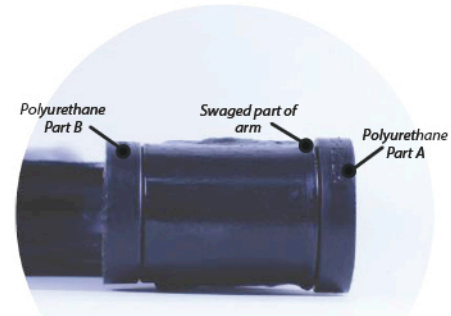


Figure 2 - which way to fit the bushes in the arm

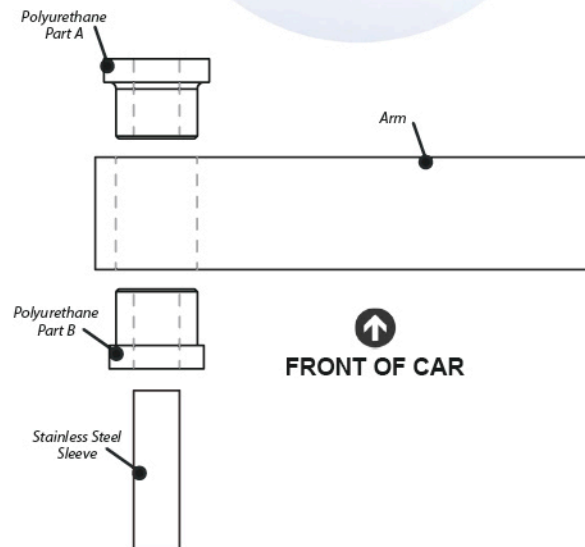


Figure 1 - how to fit the polyurethane parts in the arm