

POWERFLEX®

PART NUMBER
PFF19-1901

DESCRIPTION
FRONT ARM FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes 2 x Polyurethane Washers
- 2 x Stainless Steel Sleeves 1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the front arm.
2. Clean any dirt and corrosion from the bore of the arm, and file off any sharp edges.
3. Push the polyurethane part into the bore of the arm, so that the smaller end of the bush sits on the top of the arm.

TIP: Apply some washing up liquid to the bore of the arm to aid in fitting.

4. Apply some of the supplied grease to the bore of the polyurethane part and push in the stainless steel sleeve so that it sits flush within the part.
5. Apply some more of the supplied grease to the spigot on the subframe, and carefully place the polyurethane washer over the spigot.
6. Refit the arm to the subframe and tension all hardware to manufacturers recommended torque settings.

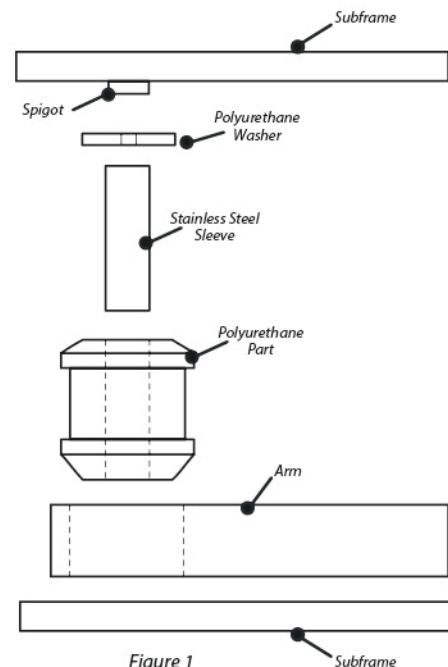


Figure 1