

POWERFLEX®



PART NUMBER
PFR69-511

DESCRIPTION
REAR UPPER ARM INNER REAR BUSH

INSTALLATION GUIDE

Contents (parts per car):

- 2 x bushes (4 polyurethane parts)
- 2 x metal sleeves
- 4 x nylon washers
- 1 x grease

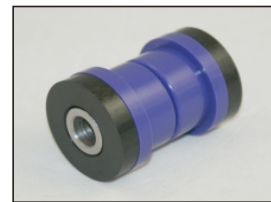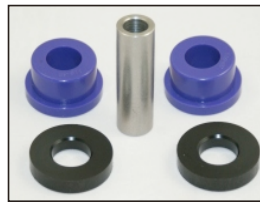

Please read the complete fitting instructions and check package components before fitment.
This installation guide is to be used in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licenced technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Installation Guide:

- Remove rear upper arms, remove original bush from the arm.
- Insert the 2 polyurethane top hat bushes into the arm, apply some of the grease supplied to the bore of the bushes and the outside of the stainless sleeve.
- Slide the sleeve into the bushes leaving an equal amount showing each end.
- Apply grease to the 2 faces of the washers and slide a washer onto each side of the bush.
- Refit the arm to the car.

