

POWERFLEX®

PART NUMBER

PFR1-825

DESCRIPTION

REAR TRAILING ARM FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2x Bushes 1x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove rear trailing arm and take out the original bush from the arm.
2. Clean any dirt or debris from the inside of arm bracket and deburr any sharp edges. Fig A.
3. Apply some of the supplied grease to the outside body of the bush.
4. Fit bush into the arm bore.
Position bush on an angle and push through. Make sure to push the bush body and NOT the metal bracket.
Fig B.
6. Refit the trailing arm to car and tension all hardware to manufacturers recommended torque settings.

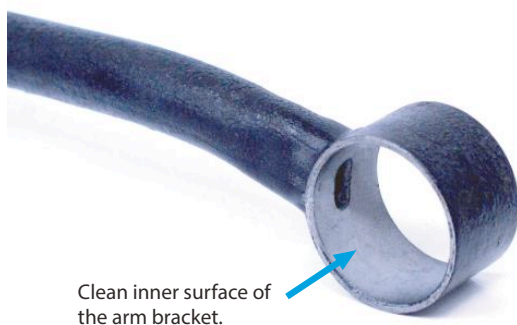


Fig A.



Fig B.