

POWERFLEX®

PART NUMBER

PFR57-125

DESCRIPTION

TRANSMISSION MOUNT LARGE BUSH

INSTALLATION GUIDE

Product description:

This part includes options of two support washers, one plain buffer washer and one with a built in insert to fit into the voided bush for quick and easy tuning of stiffness levels.

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 2 x Polyurethane B Washer Inserts
- 1 x Stainless Steel Sleeve
- 1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*



Fitting Instructions:

1. Remove the original bushes from transmission mount, clean any dirt and corrosion from the bores in the mount. Make sure to remove any sharp edges from the bore.
2. Fit polyurethane A bushes into the bore of the mount. As shown in *Figure 1*.
3. Apply supplied grease into bore of the bush and around top faces and fit in the stainless steel sleeve.
5. To increase rigidity by a further 42%, fit polyurethane B insert bushes into polyurethane A bushes. As shown in *Figure 2*.
6. Refit the bracket to the car using the original bolt and tension all hardware to manufacturers recommended torque settings.

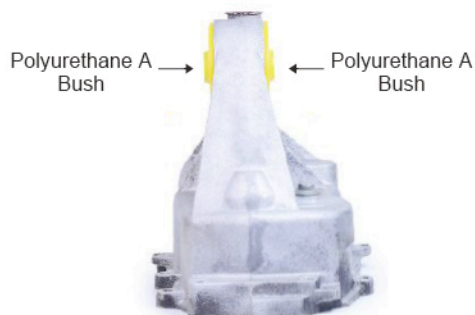


Figure 1: Fitted Assembly

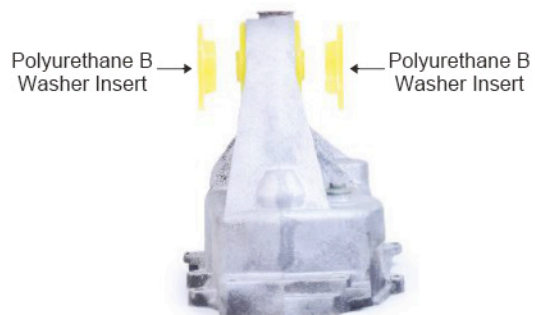


Figure 2: Fitted Assembly - Increased rigidity