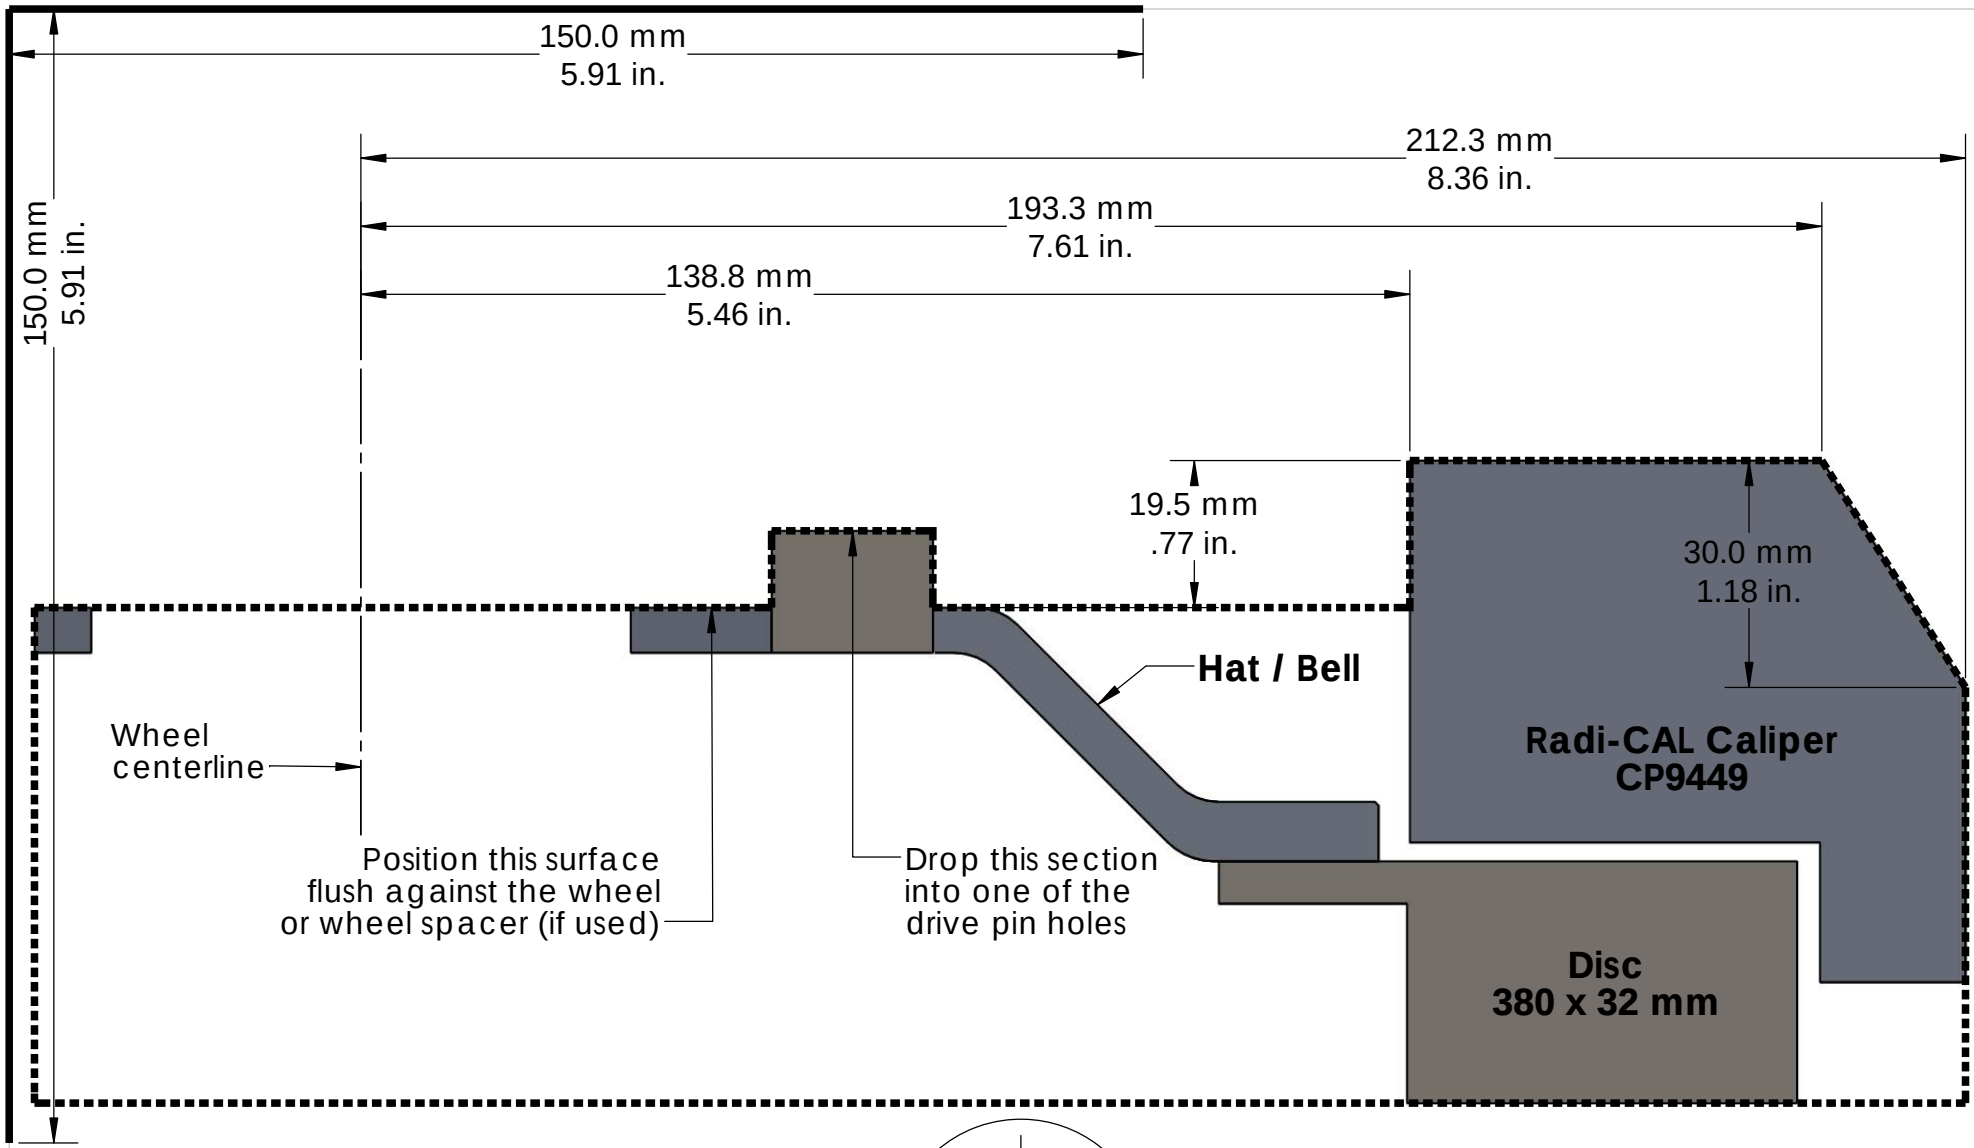

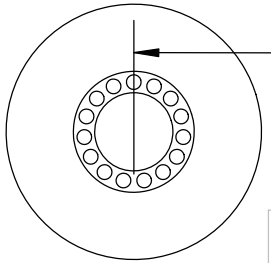

Template must be lined up through the center of one drive pin hole and the center of the wheel

Instructions:

1. Print out and confirm the scale in both directions.
2. Cut out along the outer dotted lines.
3. Optional: Attach to a more rigid surface such as cardboard.
4. Place the template against the inside of the wheel making sure that the hat/bell surface sits flush against the wheel or, if used, wheel spacers.
5. A minimum of 2.5 mm (.10 in.) clearance is recommend to account for wheel and suspension component flex.

Wheel Clearance Template Porsche 991 GT3/GT3 RS Rear Radi-CAL Competition Package CP9449 caliper, 380 mm disc	essex parts services, inc. www.essexparts.com
Essex package no. 13.01.10074	DWG. NO. 1755 REV

5 4 3 2 1